

Art. **N30013**

**CITROËN BERLINGO**

 05/96→03/08


**PEUGEOT PARTNER**

 05/96→03/08

**PEUGEOT RANCH**

 05/96→03/08

**KIT x6**

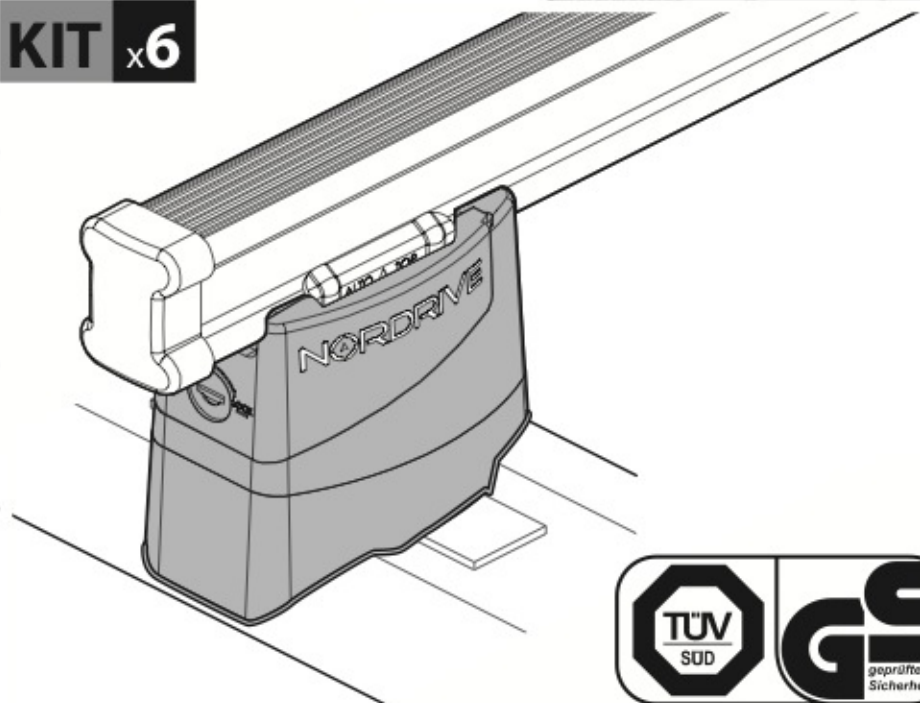

**SENZA VOLETTO**  
WITHOUT ROOF  
WINDOWS



**CON VOLETTO**  
WITH ROOF  
WINDOWS

- ⓘ ADATTO PER
- ⒸB SUITABLE FOR
- Ⓕ INDiqué POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE**  
**KARGO SERIES**



- ⓘ ISTRUZIONI DI MONTAGGIO
- ⒸB FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- ⒶL MONTAGE-INSTRUCTIES
- Ⓐ MONTERINGSANVISNING
- ⒻI ASENNUSOHJE
- ⒻE PAIGALDUSJUHEND
- ⒻT STIPRINÁŠANAS INSTRUKCIJA
- ⒻT PRITVIRTINIMO INSTRUKCIJOS
- ⒻL INSTRUKCJA MONTAŻU
- ⒻS Инструкции по установке
- ⒻZ NÁVOD NA MONTÁŽ
- ⒻK NÁVOD NA MONTÁŽ
- ⒻO NAVODILA ZA PRITRJEVANJE
- ⒻR UPUTA ZA SASTAVLJANJE
- ⒻH A FELSZERELÉS MÓDJA
- ⒻR Οδηγίες συναρμολόγησης
- ⒻR MONTAJ TALIMATLARL
- ⒻG ИНСТРУКЦИИ ЗА МОНТАЖ
- ⒻB UPUTSTVA ZA MONTAŽU



**Kargo**



ACCIAIO  
Steel

- ⓘ BARRE KARGO
- ⒸB KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO



Art. **N10005** x3



**Kargo-Plus**




ALLUMINIO  
Aluminium

- ⓘ BARRE KARGO-PLUS
- ⒸB KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS



Art. **N10035** x3







**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

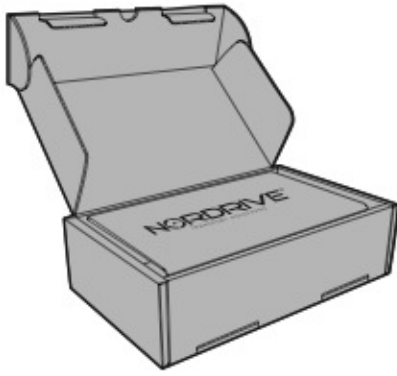


# NORDDRIVE®

TRANSPORT SOLUTIONS

Art. **N30013**

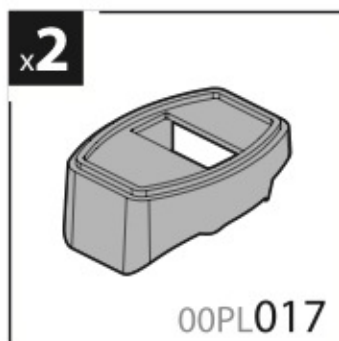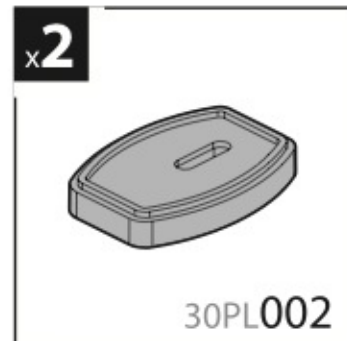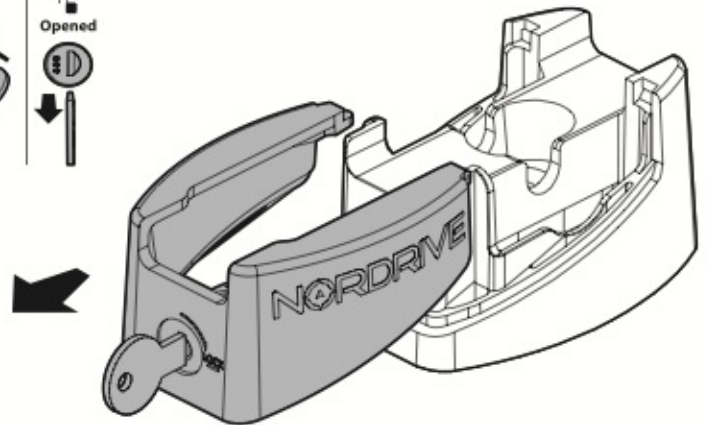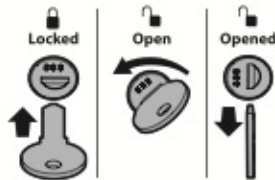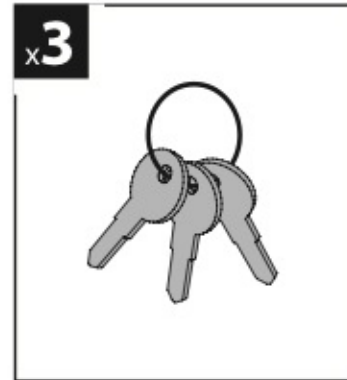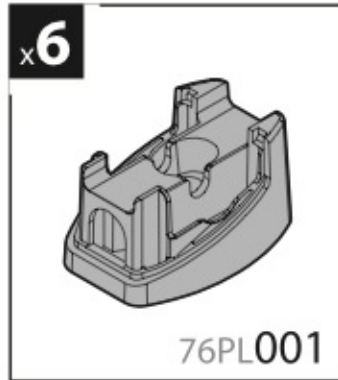


x12

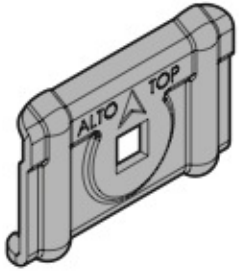


40FE001

x6

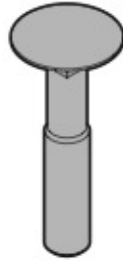


60BQ8045

x6




62BB0800

x4

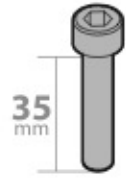

M6x35  
60CE6035

x2




M6x55  
60CE6055

x6




61ED0611

x6




ø6 - ø15  
82FE0001

x6

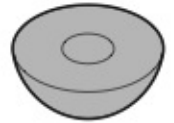


60RO004

x6

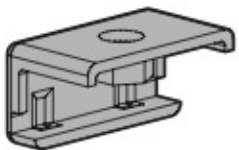

40FE002

x1






72FE0001

x1



72FE0002

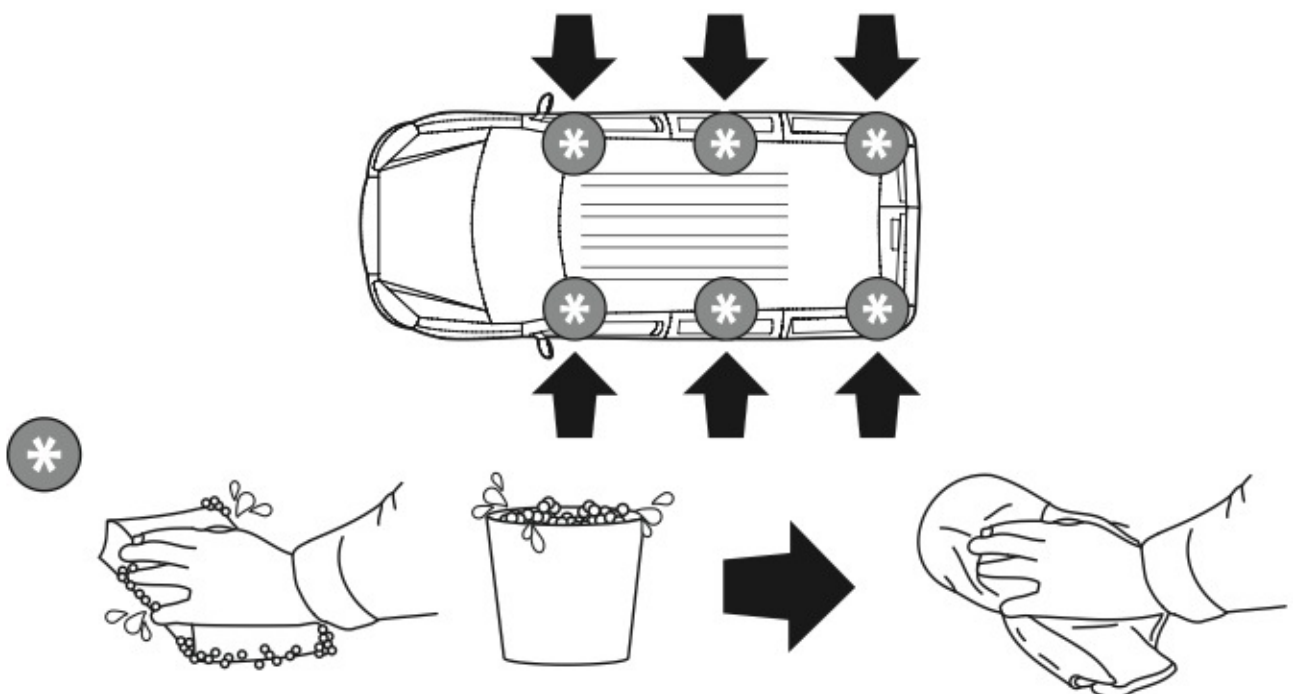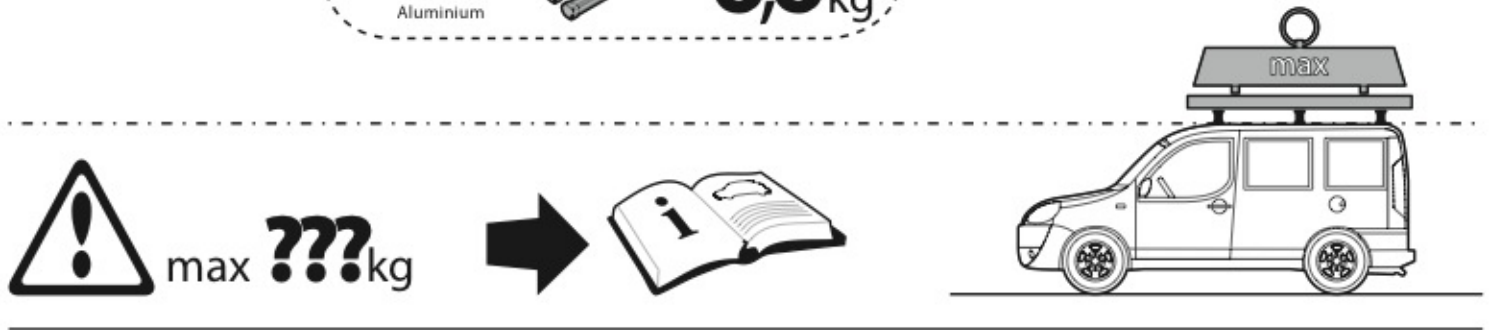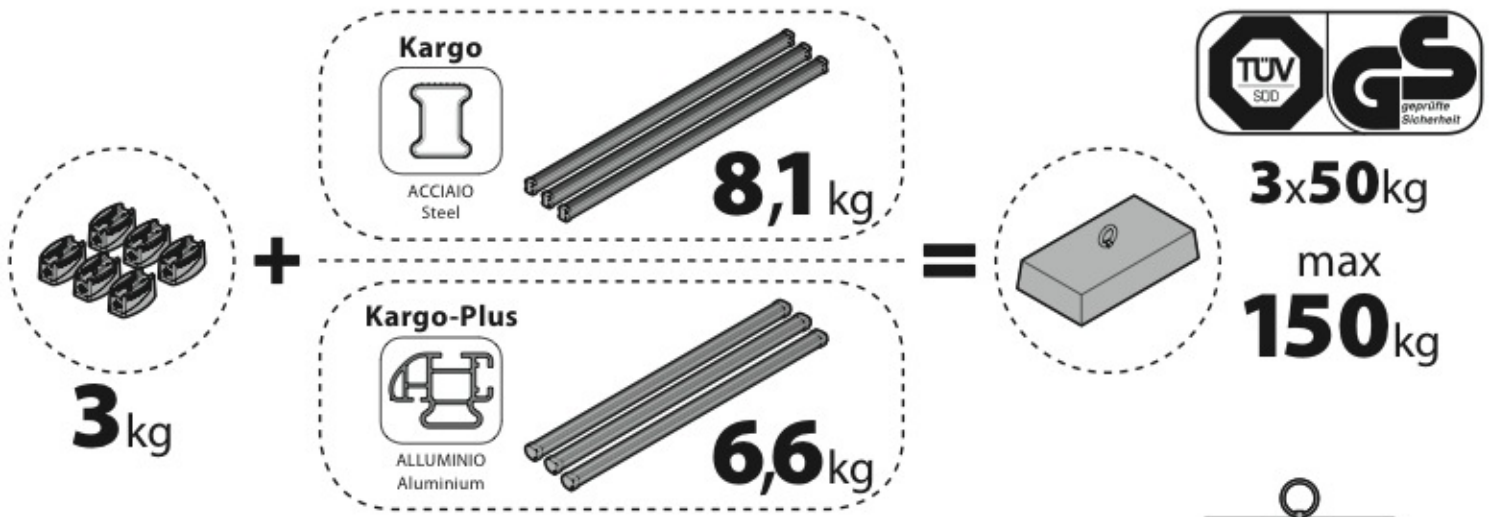





(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγία συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

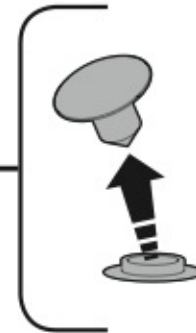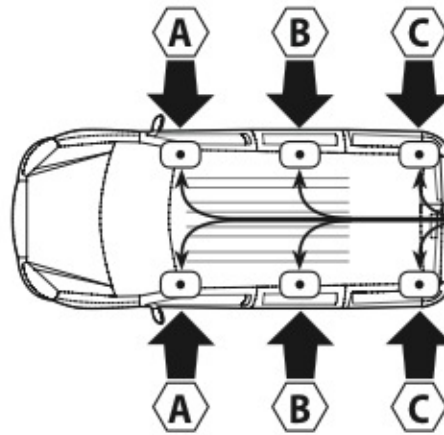


2

A

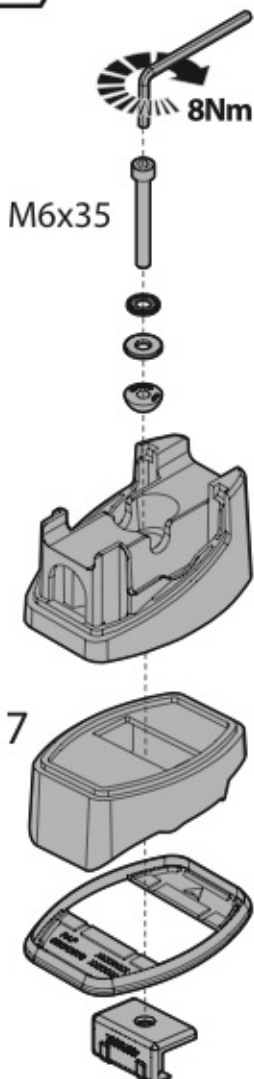


2

B



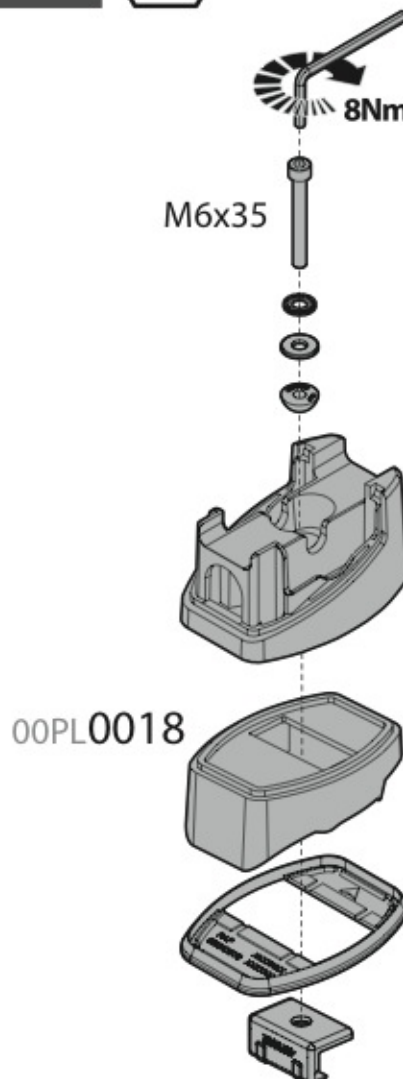


2





C

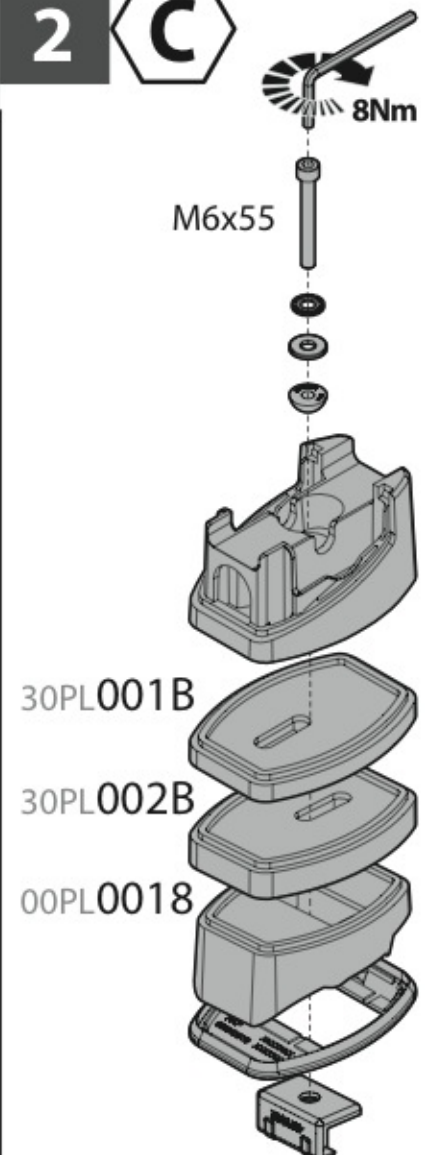

3

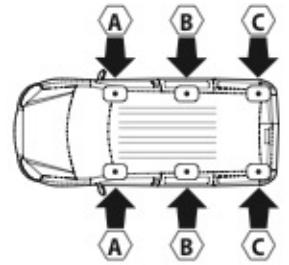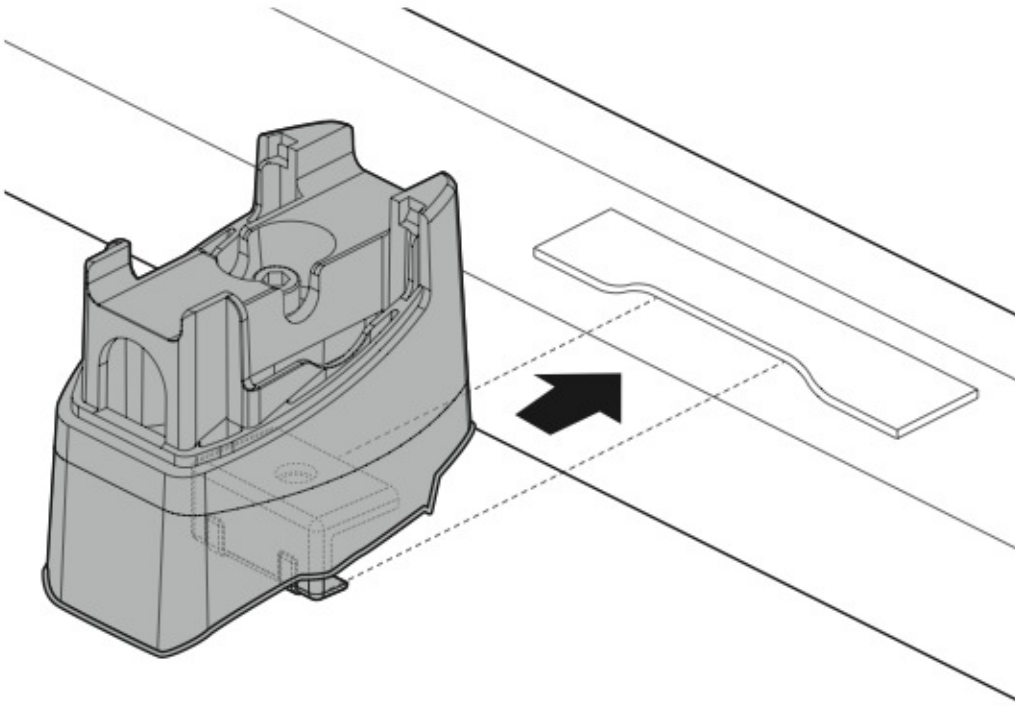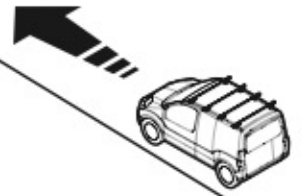

4

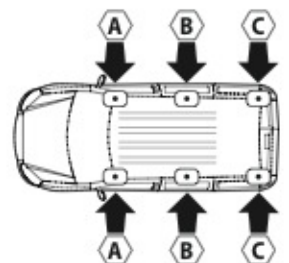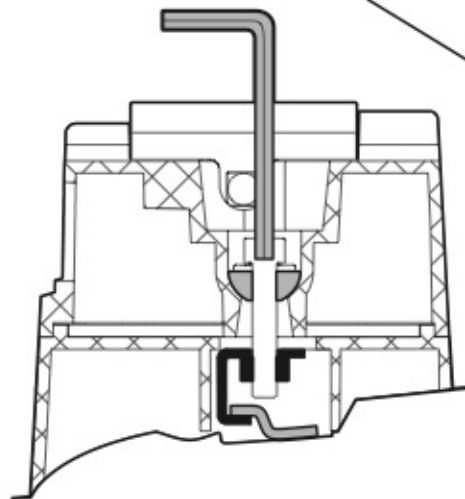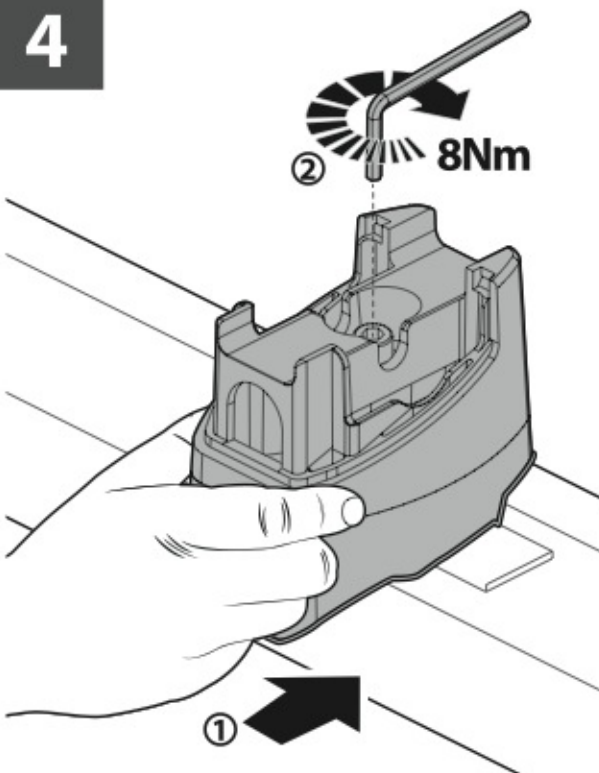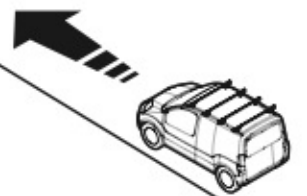



# ATTENZIONE WARNING



**A** **Kargo**  
 ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

**OK** ✓

**NO** ✗

**OK** ✓

**OK** ✓

**NO** ✗

**NO** ✗

**B** **Kargo-Plus**  
 ALLUMINIO  
Aluminium

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

**OK** ✓

**NO** ✗

**OK** ✓

**OK** ✓


**NO** ✗

**NO** ✗



5


A

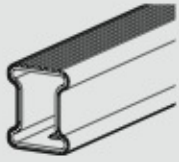


**Kargo**



ACCIAIO  
Steel

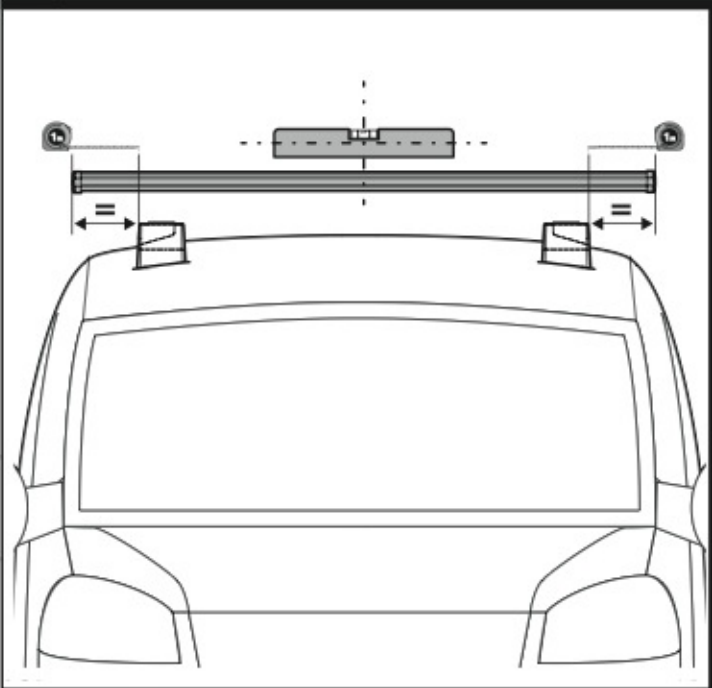


B

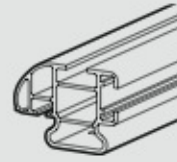




**Kargo-Plus**



ALLUMINIO  
Aluminium

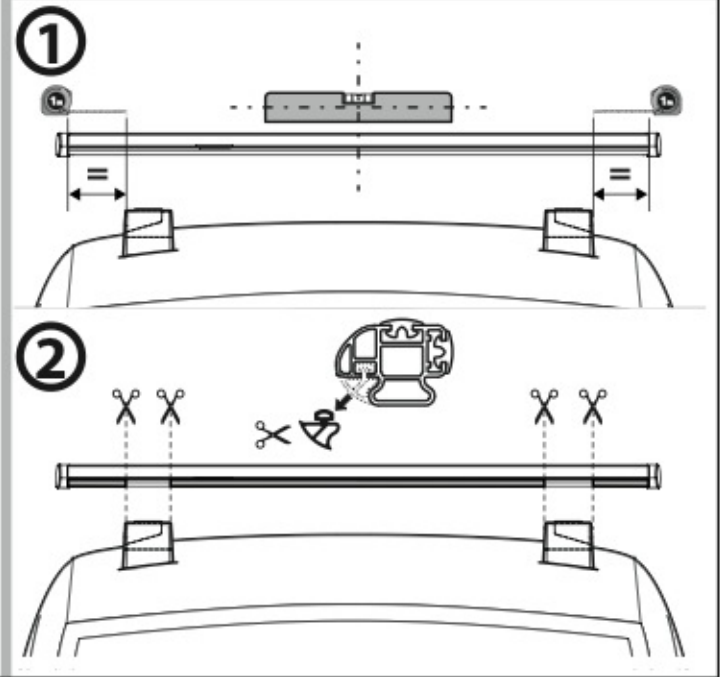


6

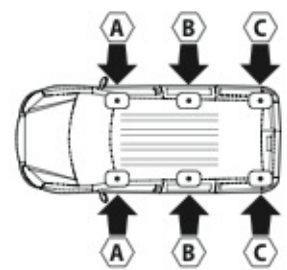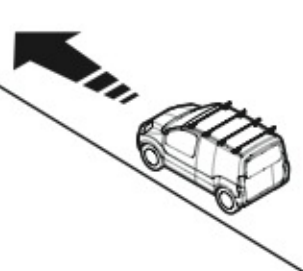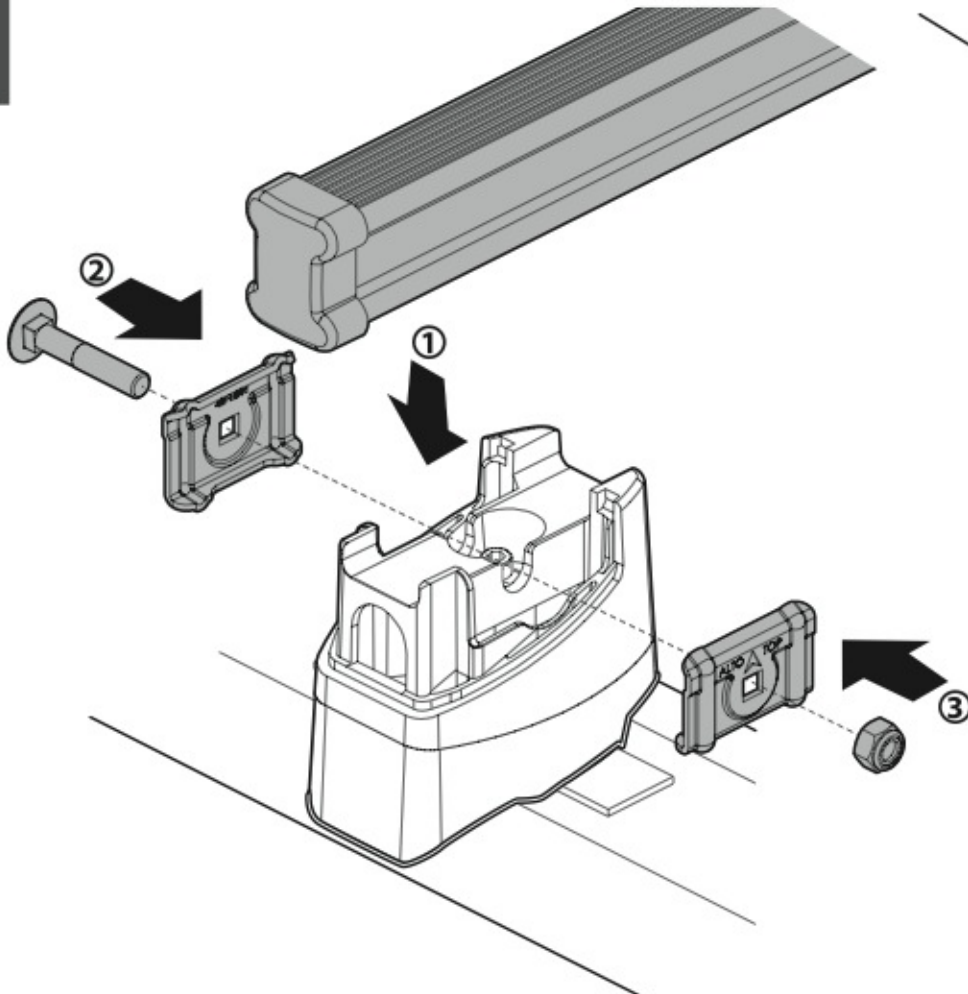




7

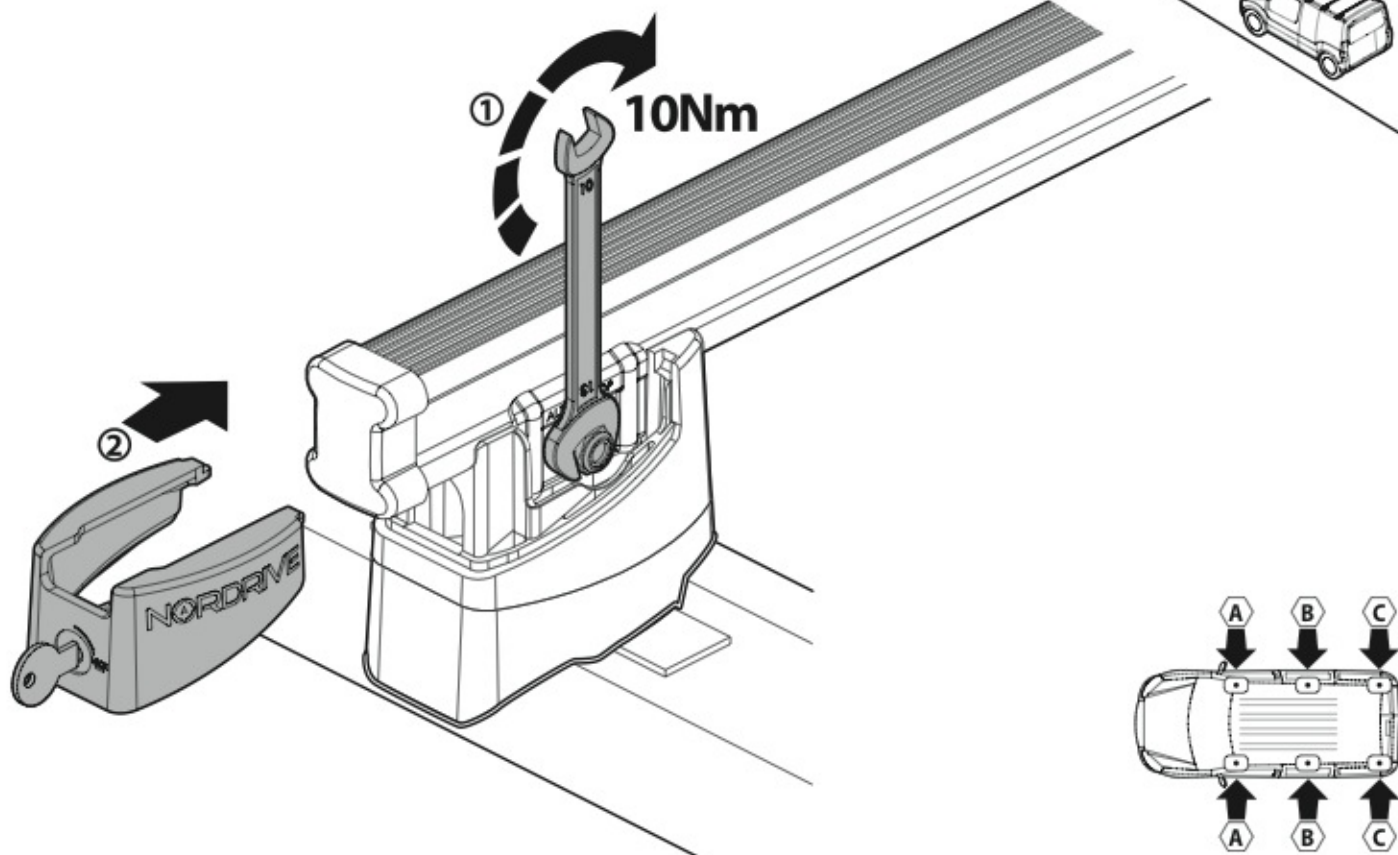


8

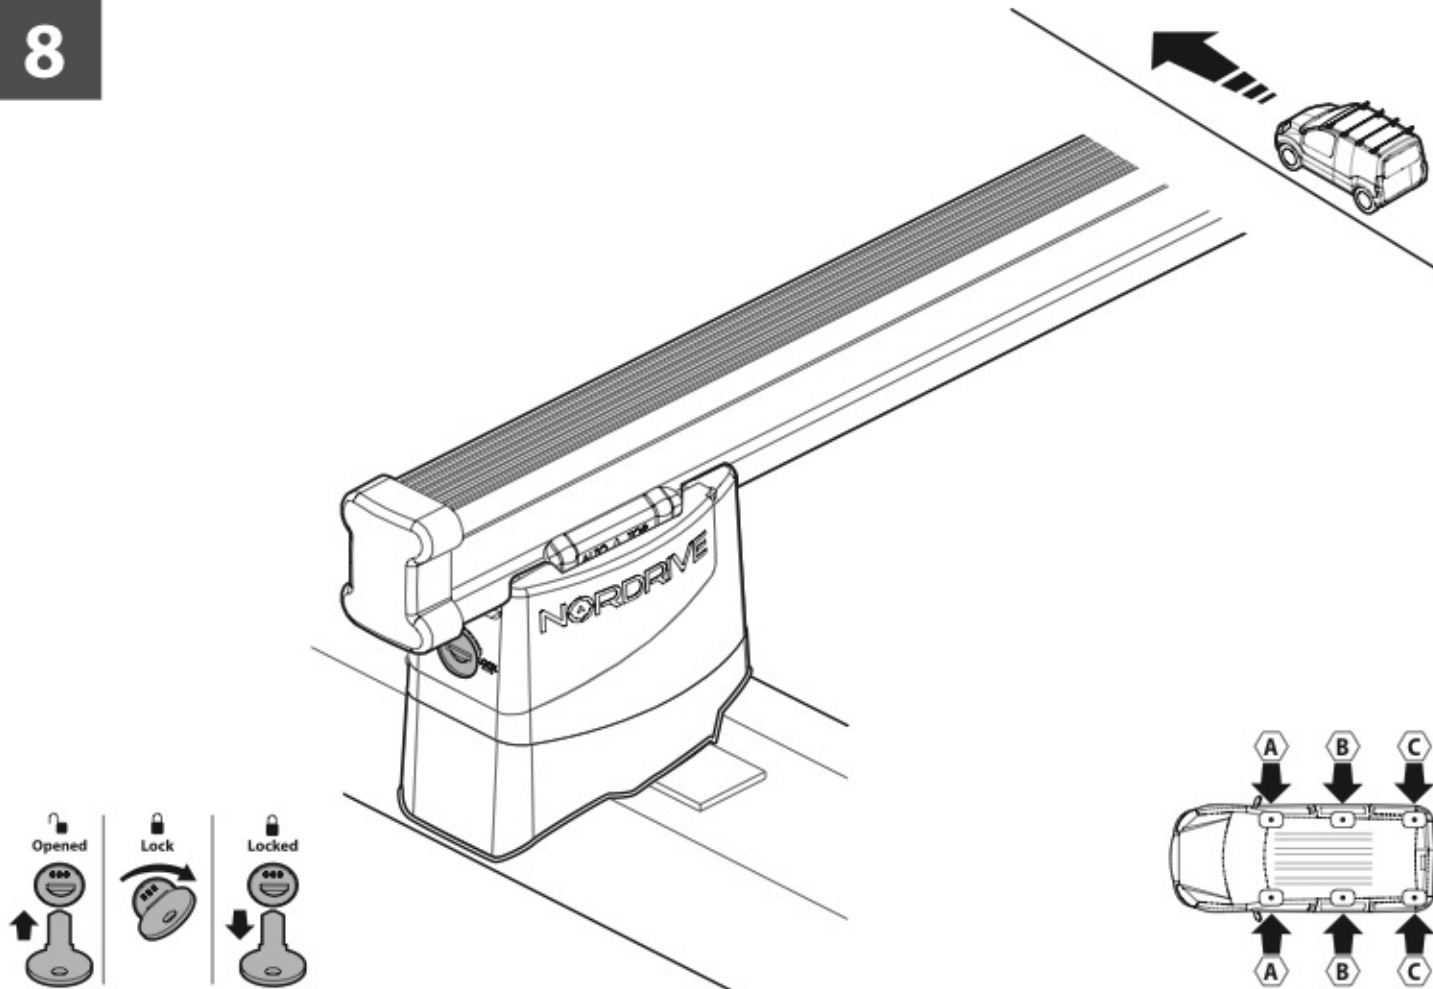

# Kargo series




Acciaio / Steel

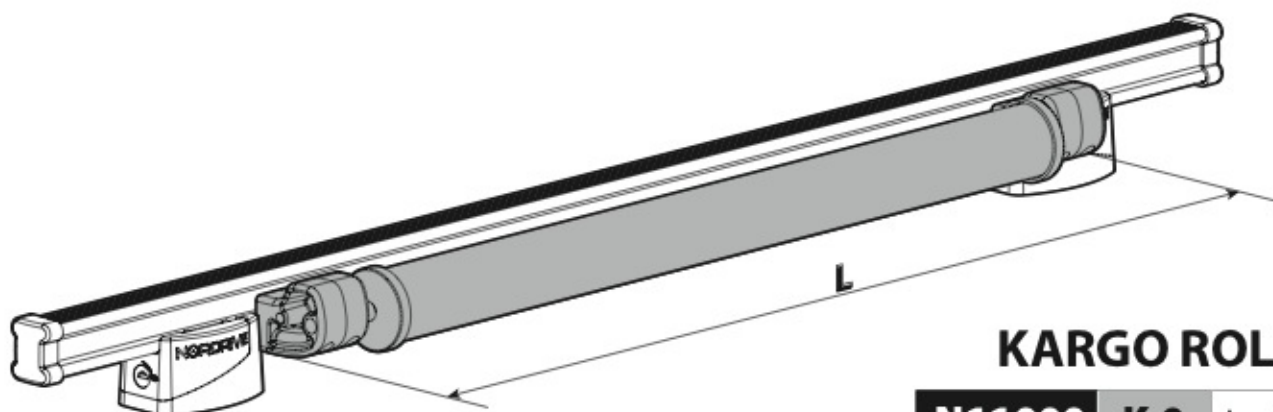


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

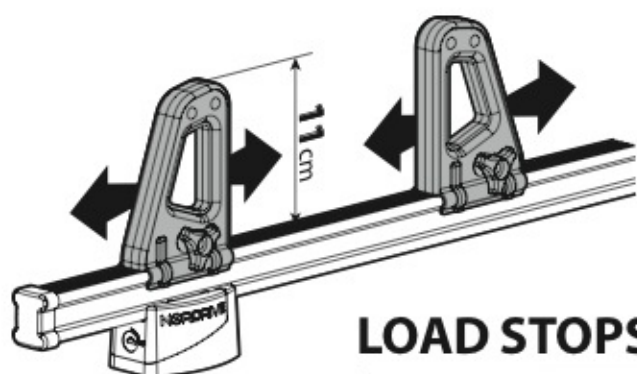


## LOAD STOPS

**N11001** K-1

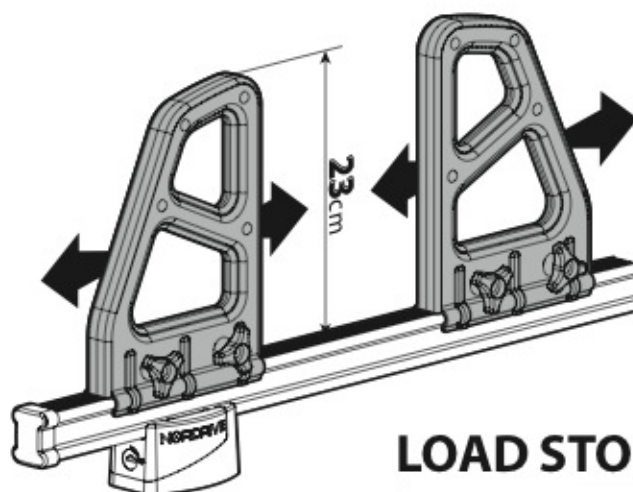

## LOAD STOPS

**N11002** K-2

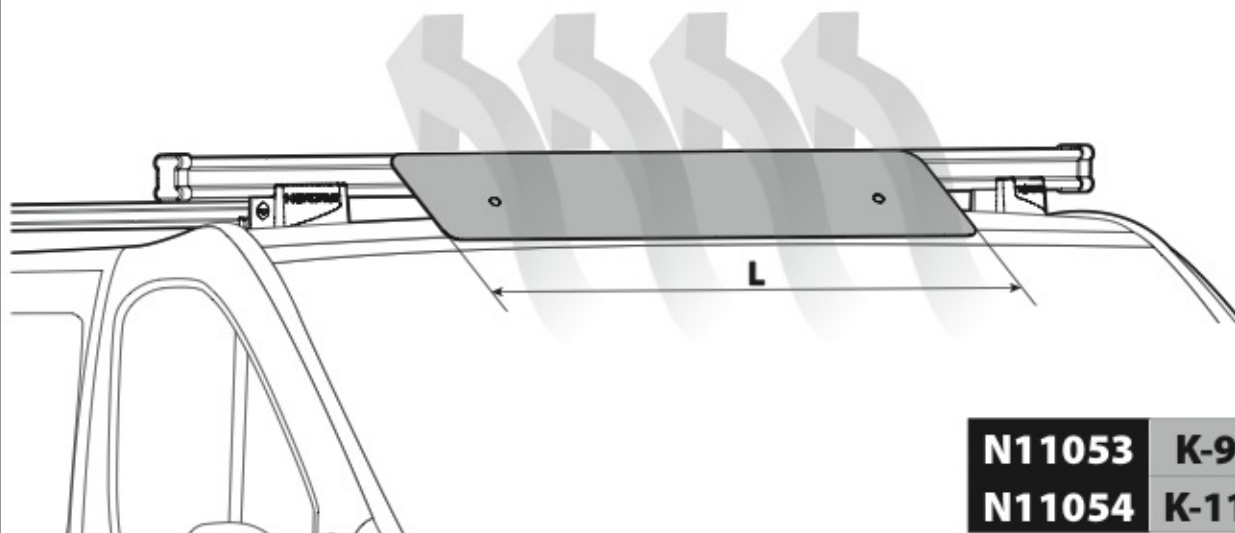

## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series




Alluminio / Aluminium

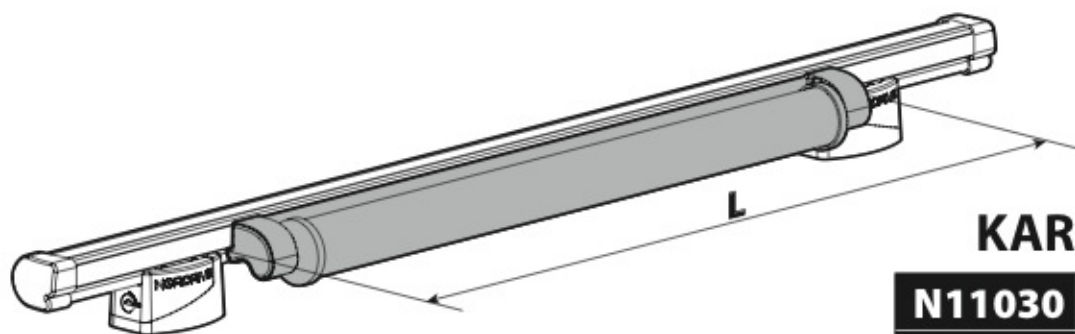

## KARGO ROLLER


**N11030** KP-0 L = 64 cm

**N11034** KP-7 L = 96 cm

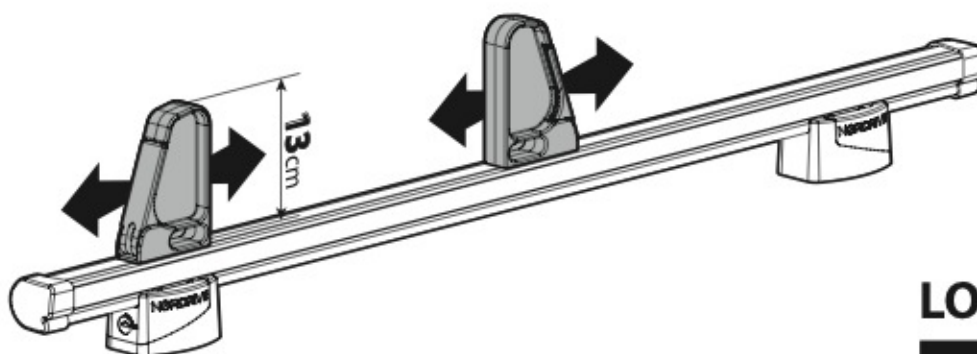


## LOAD STOPS

**N11031** KP-1

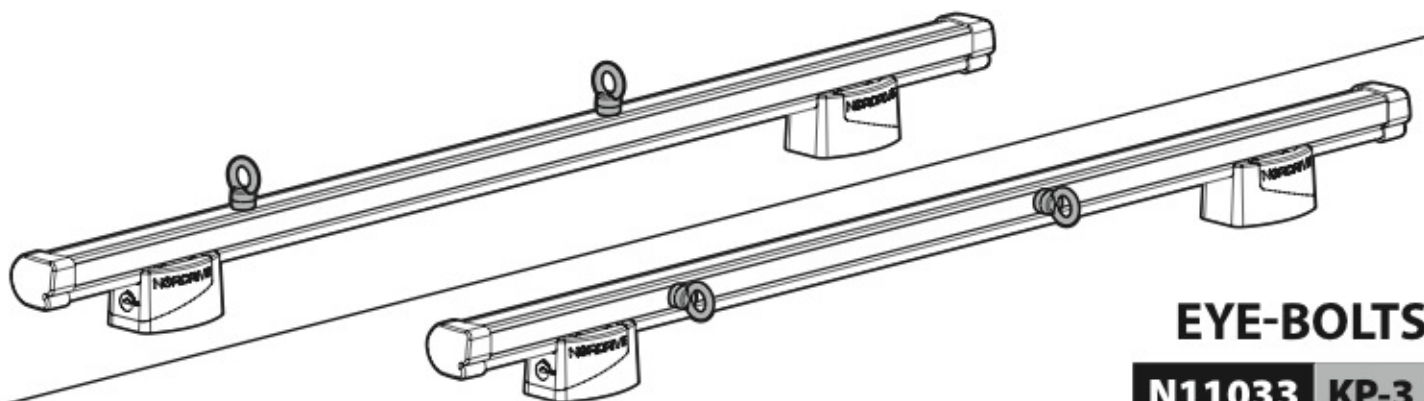

## EYE-BOLTS

**N11033** KP-3

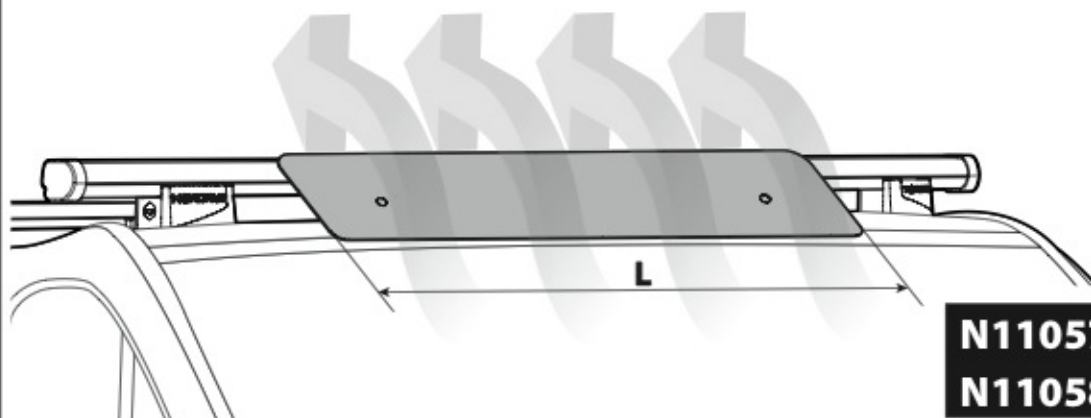

## SPOILER

**N11057** KP-9 L = 95 cm

**N11058** KP-11 L = 110 cm



OPTIONALS PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel


**Kargo-Plus** series



Alluminio / Aluminium



**KARGO-TUBE**

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

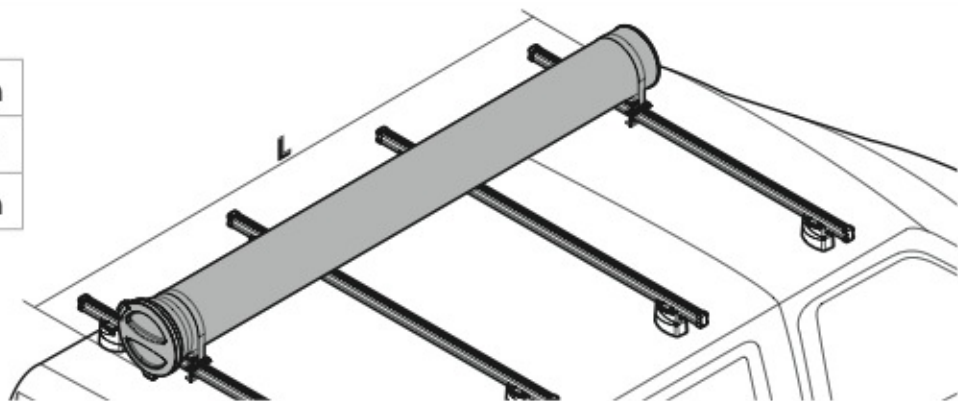


**LADDER HOLDER STRAPS**

**N11065 U-5**

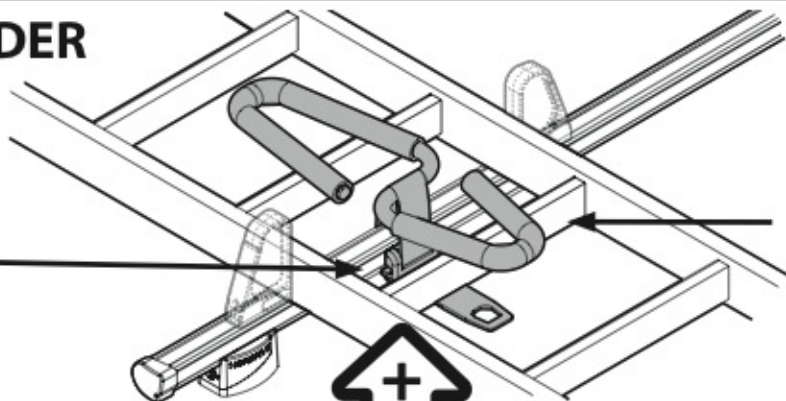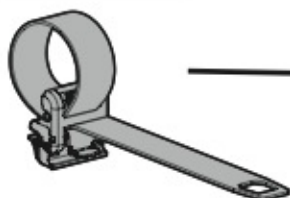


**LADDER STEP ADAPTER**

**N11067 U-6**

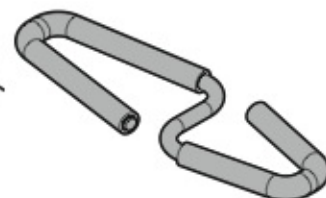

RICHIESTO  
REQUIRED  
REQUIS  
ERFORDERLICH  
NECESSARIO

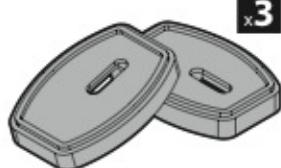

x3


Art. **N99985**

x4

M6x50  
60CE6050


x2

M6x70  
60CE6070

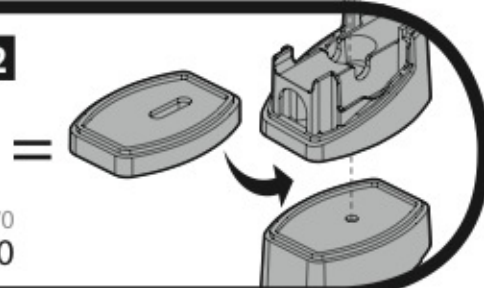

**EXTENSION ROLLER**

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

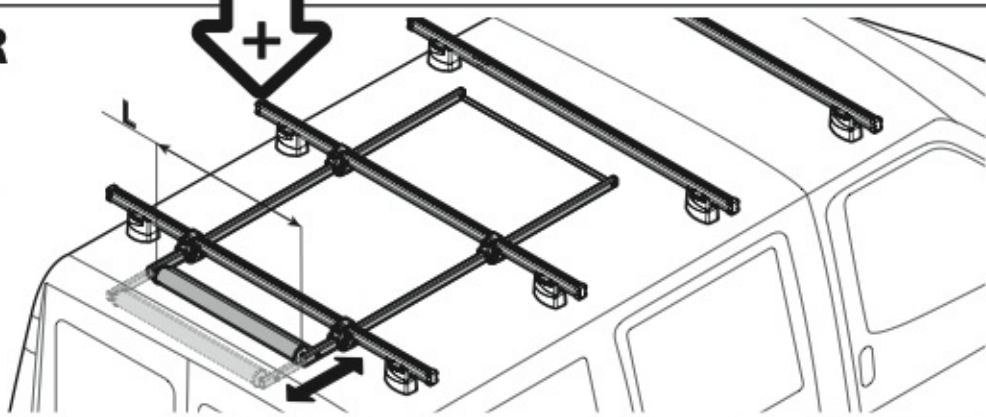

**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

NORDRIVE<sup>®</sup> is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)

91CA0387 r01